



Quick Start Guide
FRDM-KW41Z

FREEDOM DEVELOPMENT PLATFORM



GET TO KNOW THE FRDM-KW41Z

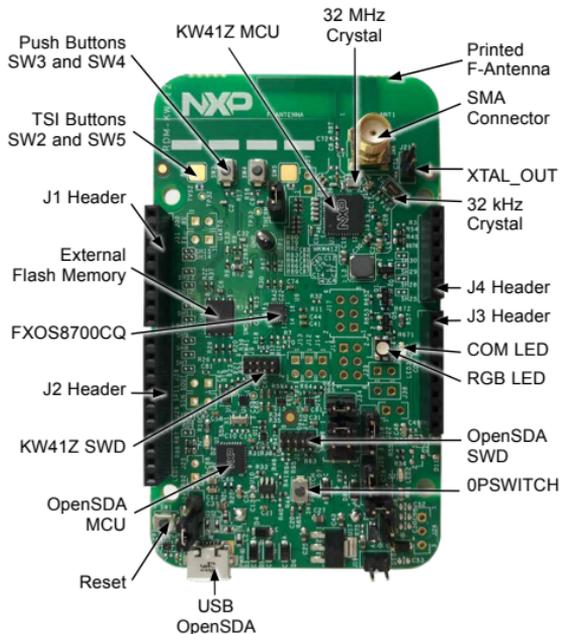


Figure 1: FRDM-KW41Z Board Components



Figure 2: FRDM-KW41Z Board Connections

HOW TO GET STARTED

1. Connect the FRDM-KW41Z board to a PC using the included micro-USB cable to the USB OpenSDA connector of the FRDM-KW41Z.
2. Your FRDM-KW41Z RGB LED should start cycling through the colors Red, Green and Blue when you connect the board.
3. Explore more out-of-box demos and download software and tools on www.nxp.com/FRDM-KW41Z/startnow.
4. Enjoy your design freedom with the FRDM-KW41Z.



SUPPORT

Visit www.nxp.com/support for a list of phone numbers within your region.

WARRANTY

Visit www.nxp.com/warranty for complete warranty information.



Get Started

Download installation software and documentation under “Jump Start Your Design” at www.nxp.com/FRDM-KW41Z.

The following information is provided per Article 10.8 of the Radio Equipment Directive 2014/53/EU:

- (a) Frequency bands in which the equipment operates.
- (b) The maximum RF power transmitted.

PN	RF Technology	(a) Freq Ranges (EU)	(b) Max Transmitted Power
FRDM-KW41Z	BLE	2360 MHz – 2483 MHz	3.5 dBm
	IEEE 802.15.4	2360 MHz – 2483 MHz	3.5 dBm

EUROPEAN DECLARATION OF CONFORMITY

(Simplified DoC per Article 10.9 of the Radio Equipment Directive 2014/53/EU)

This apparatus, namely FRDM-KW41Z Freedom Development Platform, conforms to the Radio Equipment Directive 2014/53/EU.

The full EU Declaration of Conformity for this apparatus can be found at this location:
www.nxp.com/FRDM-KW41Z

www.nxp.com

NXP, the NXP logo and Kinetis are trademarks of NXP B.V. All other product or service names are the property of their respective owners. © 2019 NXP B.V.

Document Number: FRDMKW41ZQRG REV 4
Agile Number: 926-29102 REV E

